

Aufbauanleitung Alu-Liegestuhl

Assembly instructions Deck chair (powder coated aluminium)



C x6



B x2



D x1




Aufbau Gestell

- 1 Entnehmen Sie die Schrauben (C) und die Arretier-
vorrichtung zur Höhenverstellung (B) aus der
Verpackung.
- 2 Verschrauben Sie die Arretiervorrichtung (B) mithilfe
des Inbusschlüssels (D) mit dem hinteren Fuß des
Aluliegestuhlgestells (A) in den drei vorgesehenen
Löchern.
- 3 Achten Sie darauf, dass die Öffnungen der wellen-
förmigen Arretiervorrichtungen (B) in Richtung der
Vorderseite des Liegestuhles zeigen (im aufgestellten
Zustand).

Frame assembly

- 1 Remove the screws (C) and the locking device for
height adjustment (B) from the packaging.
- 2 Screw the locking device (B) into the three holes
provided using the Allen key (D) with the rear foot
of the aluminum deck chair frame (A).
- 3 Make sure that the openings of the wave-shaped
locking devices (B) point towards the front of the
lounger (when set up).

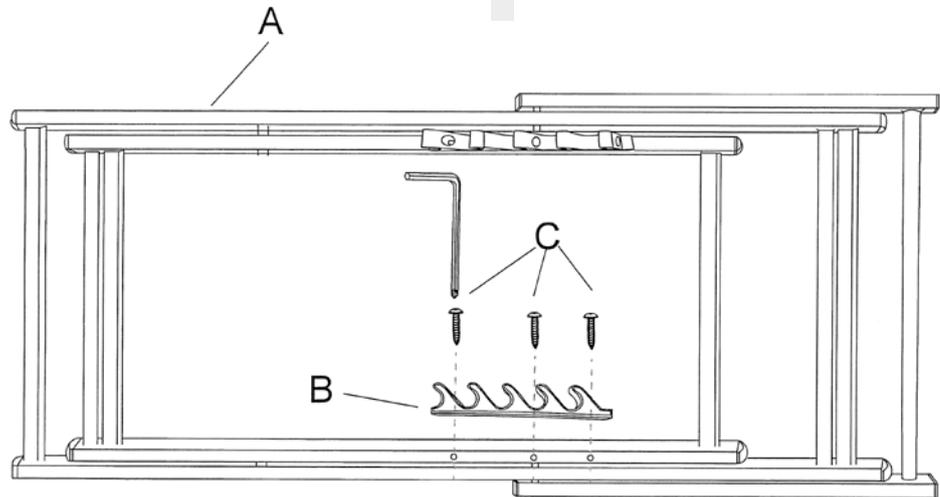

Motivwechsel Druckteil

- 1 An der Oberkante den Stab, auf dem das Druckteil
aufgezogen ist, aus dem Hohlraum entnehmen.
Dafür das Druckteil leicht nach unten ziehen und
den Stab herausnehmen.
- 2 Die obere Seite des Druckteils aus dem Gestell ziehen.
- 3 Schritte 1 und 2 an der Unterkante wiederholen.
- 4 Wechseldruckteil auspacken.
- 5 Das neue Druckteil an der Oberkante um das Gestell
legen, die Druckseite zeigt dabei nach oben.
- 6 Das Druckteil nun weiter durch den Spalt zwischen
den Querstreben ziehen, bis die Naht des Hohlraums
hinter dem Gestell ist.
- 7 Den Stab in den Hohlraum schieben.
- 8 Schritte 5 bis 7 an der Unterkante wiederholen.

Change of printed motif

- 1 Pull the rod out of hemstitch at the top where the
print is mounted. Pull the print just slightly and take
the rod out.
- 2 Pull the upper side of the print out of the frame.
- 3 Repeat step 1 and 2 at the bottom.
- 4 Unpack the print for change.
- 5 Put the new print at the top of the frame with the
motif showing upwards.
- 6 Place it through the space between upper cross braces
until the seam of the hemstitch is behind the frame.
- 7 Place the rod into the hemstitch.
- 8 Repeat step 5 and 7 at the bottom.

